



Jetson Platform

AIB-MX11/MX12

AIB-MX21/MX22

USER MANUAL

Document Change History

Version	Date	Description
V1.0	2023/07/06	Initial Release.
V1.1	2023/10/30	Update DS information
V1.2	2025/11/19	Update J1 module FAN spec for AIB-MX11/12/21/22-1-A2

Disclaimer

The information presented in this document is for informational purposes only and may contain technical inaccuracies, omissions and typographical errors.

The information contained herein is subject to change and may be rendered inaccurate for many reasons, including but not limited to product and roadmap changes, component and motherboard version changes, new model and/or product releases, product differences between differing manufacturers, software changes, BIOS flashes, firmware upgrades, or the like. Aetina assumes no obligation to update or otherwise correct or revise this information. However, Aetina reserves the right to revise this information and to make changes from time to time to the content hereof without obligation of Aetina to notify any person of such revisions or changes.

Aetina makes no representations or warranties with respect to the contents hereof and assumes no responsibility for any inaccuracies, errors or omissions that may appear in this information. Aetina specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. in no event will Aetina be liable to any person for any direct, indirect, special or other consequential damages arising from the use of any information contained herein, even if nvidia is expressly advised of the possibility of such damages.

Copyright Notice

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Aetina assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

Aetina reserves the right to make changes in the product design without notice to its users.

Version 1.0

Copyright©2022 by Aetina, Inc. All rights reserved.

Acknowledgements

All other products' name or trademarks are properties of their respective owners.

- NVIDIA®, the NVIDIA logo, Jetson™ and Jetson Xavier™ are trademarks of the NVIDIA Corporation
- Intel®, Core™ are trademarks of Intel®, Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp
- IBM and VGA are trademarks of International Business Machines Corporation.
- Ubuntu is a registered trademark of Canonical
- ESS is a trademark of ESS Technology, Inc.

All other product names or trademarks are properties of their respective owners. No ownership is implied or assumed for products, names or trademarks not herein listed by the publisher of this document. For more information about this and other Aetina products, please visit our web-site at: <http://www.Aetina.com/>

Customer Support Overview

Contact your distributor, sales representative, or Aetina's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:

- Product name and serial number
- Description of your peripheral attachments
- Description of your software (operating system, version, application software, etc.)
- A complete description of the problem
- The exact wording of any error messages

Visit the Aetina website at <https://www.Aetina.com/support-warranty-policy.php> where you can find the latest information about the product.

Contact Information

Aetina Corporation | Headquarters

17F-1, No.237, Sec.1, Datong Rd., Xizhi Dist., New Taipei City 221, TAIWAN

Phone +886-2-7709 2568

Fax +886-2-7746 1102

Mail sales@Aetina.com

Worldwide Technical Support

Mail Tech_support@aetina.com

Product Warranty (2 years)

Aetina warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Aetina, or which have been subject to misuse, abuse, accident or improper installation. Aetina assumes no liability under the terms of this warranty as a consequence of such events.

Because of Aetina's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Aetina product is defective, it will be repaired or replaced at no charge during the warranty period. For out of warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Aetina products used other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy of the proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

ESD Warning

This product, like all electronic products, uses the product that can be damaged by electrostatic discharge (ESD). When handling, care must be taken so that the devices are not damaged. Damage due to inappropriate handling is not covered by the warranty. The following precautions must be taken:

- Do not open the protective conductive packaging until you have read the following and are at an approved anti-static workstation.
- If working on a prototyping board, use a soldering iron or station that is marked as ESD-safe.
- Always disconnect the product from the prototyping board when it is being worked on.
- Always discharge yourself by touching a grounded bare metal surface or approved anti-static mat before picking up an ESD - sensitive electronic component.
- Use an approved anti-static mat to cover your work surface.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references:

1. All cautions and warnings on the equipment should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
6. Always completely disconnect the power before working on the system's hardware.
7. Keep this equipment away from humidity.
8. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
9. The openings on the enclosure are for air convection. Protect the equipment from overheating.
DO NOT COVER THE OPENINGS.
10. Be sure that the room in which you choose to operate your system has adequate air circulation.
Ensure that the chassis cover is secure.
11. The chassis design allows cooling air to circulate effectively. An open chassis permits air leaks, which may interrupt and redirect the flow of cooling air from internal components.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If any of the following situations arises, please contact our service personnel:
 - Damaged power cord or plug
 - Liquid intrusion to the device
 - Exposure to moisture
 - Device is not working as expected or in a manner as described in this manual
 - The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device

Contents


1. Introduction	1
1.1 Features	1
1.2 Specifications	2
2. Hardware Information.....	4
2.1 Block Diagram.....	4
2.2 Connectors, LEDs, and Switches Locations	5
2.3 Connectors and Switches Description	6
2.4 Connectors and Pinout	7
2.5 Power Consumption	24
2.6 Mechanical Dimensions	25
3. Software/BSP Installation	26
4. Recovery Mode	26
5. Initial Setup.....	27
5.1 Prepare the materials	27
5.2 Hardware connection	27
5.3 Setup details	27

1. Introduction

AIB-MX11/12/21/22 series supports NVIDIA Jetson AGX Orin series modules, and you can quickly emulate the functionality of your desired end product for software development and hardware verification.

To build a functional prototype of your target system you will need:

- NVIDIA Jetson AGX Orin 32/64GB module
- Carrier board
- Power adaptor

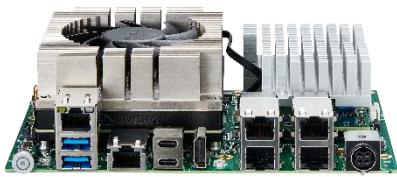

1.1 Features

- Supports NVIDIA Jetson AGX Orin 32/64GB
- 2/4 x IEEE 802.3af GbE PSE ports
- 1 x M.2 B-Key/1 x M.2 E-Key/1 x M.2 M-Key slot
- 1 x GbE/1 x 10GbE port
- Wide Power Input Range 9 to 36 VDC
- Operating Temperature -25°C ~ +80°C
- Supports OOB (out-of-band) powered by Innodisk (optional)

1.2 Specifications


Carrier board specifications

Specification	AIB-MX11	AIB-MX12	AIB-MX21	AIB-MX22
Module Compatibility	NVIDIA Jetson AGX Orin 32GB		NVIDIA Jetson AGX Orin 64GB	
AI Performance	200 TOPs		275 TOPs	
GPU	1792-core NVIDIA Ampere GPU with 56 Tensor Cores		2048-core NVIDIA Ampere GPU with 64 Tensor Cores	
CPU	8-core Arm® Cortex®-A78AE v8.2 64-bit CPU 2MB L2 + 4MB L3		12-core Arm® Cortex®-A78AE v8.2 64-bit CPU 3MB L2 + 6MB L3	
Memory	32 GB 256-bit LPDDR5 204.8 GB/s		64GB 256-bit LPDDR5 204.8 GB/s	
Storage	64GB eMMC 5.1			
Display	1 x HDMI 2.0 Type A			
Audio	Line-out/Line-in/Mic (optional with daughter board)			
Camera Input	1 x 16-Lane MIPI Expansion Connector			
LAN	1 x RJ-45 GbE port, 1 x RJ-45 10GbE port			
PoE Interface	2 x RJ-45 GbE PSE4 x RJ-45 GbE PSE2 x RJ-45 GbE PSE4 x RJ-45 GbE PSE (IEEE 802.3af(IEEE compliant, Powercompliant, Powercompliant, Powercompliant, Power Output 15W perOutput 15W perOutput 15W perOutput 15W per Port) Port) Port) Port)			
USB	2 x USB 3.2 Gen1 Type-A 1 x USB 3.2 Gen2 Type-C 1 x OTG Type-C			
I/O Interfaces	2 x UART, 1 x UART (Debug only) 1 x RS-232, 1 x RS-422 / RS-485, 2 x CAN 2.0b with isolation; support CAN FD, 2 x I ² C, 1 x I ² S, 1 x SPI, 5 x GPIO, 2 x 3.3VDC/0.5A, 3 x 5VDC/0.5A, 1 x 12VDC/0.5A, 1 x USB 2.0 1 x microSIM Card Slot			
Expansion	1 x M.2 B-Key 3042/3052 (LTE/4G/5G) 1 x M.2 E-Key 2230 (WiFi/BT) 1 x M.2 M-Key 2280 (supports NVMe; PCIe x2 Gen3), 1 x microSD Card Slot			
MISC. Function	1 x Power/Recovery/Reset Button			

	Idle: 10.5 W	Idle: 12 W
	Full Loading: 111 W	Full Loading: 132 W
Power Consumption	Idle configuration: Connect with Keyboard, Mouse and HDMI Display	
	Full Loading configuration: Connect with Keyboard, Mouse, HDMI Display and LAN with CPU and GPU 100% Loading	
Power Input / Connector	DC-in 9 to 36 VDC / 4-Pin DC Jack Power Connector	
Dimension (W x D x H)	176 x 132 x 57.32 mm (6.93 x 5.19 x 2.26 in)	
Net Weight	0.980 kg (2.161 lb) w/ Fansink	
Vibration	1 Grms, IEC 60068-2-64, random, 5 ~ 500 Hz, 1 hr/axis	
Shock	10 G, IEC 60068-2-27, half sine, 11 ms duration	
Temperature	Operating Temp.: -25°C ~ +80°C (-13°F ~ +176°F) Storage Temp.: -40°C ~ +85°C (-40°F ~ +185°F)	
Humidity	95% @ 40°C (104°F) (non-condensing)	
Software Support	Linux (Support Jetpack 5.0 above)	
Certification	CE / FCC Class A / UKCA	



2. Hardware Information

2.1 Block Diagram

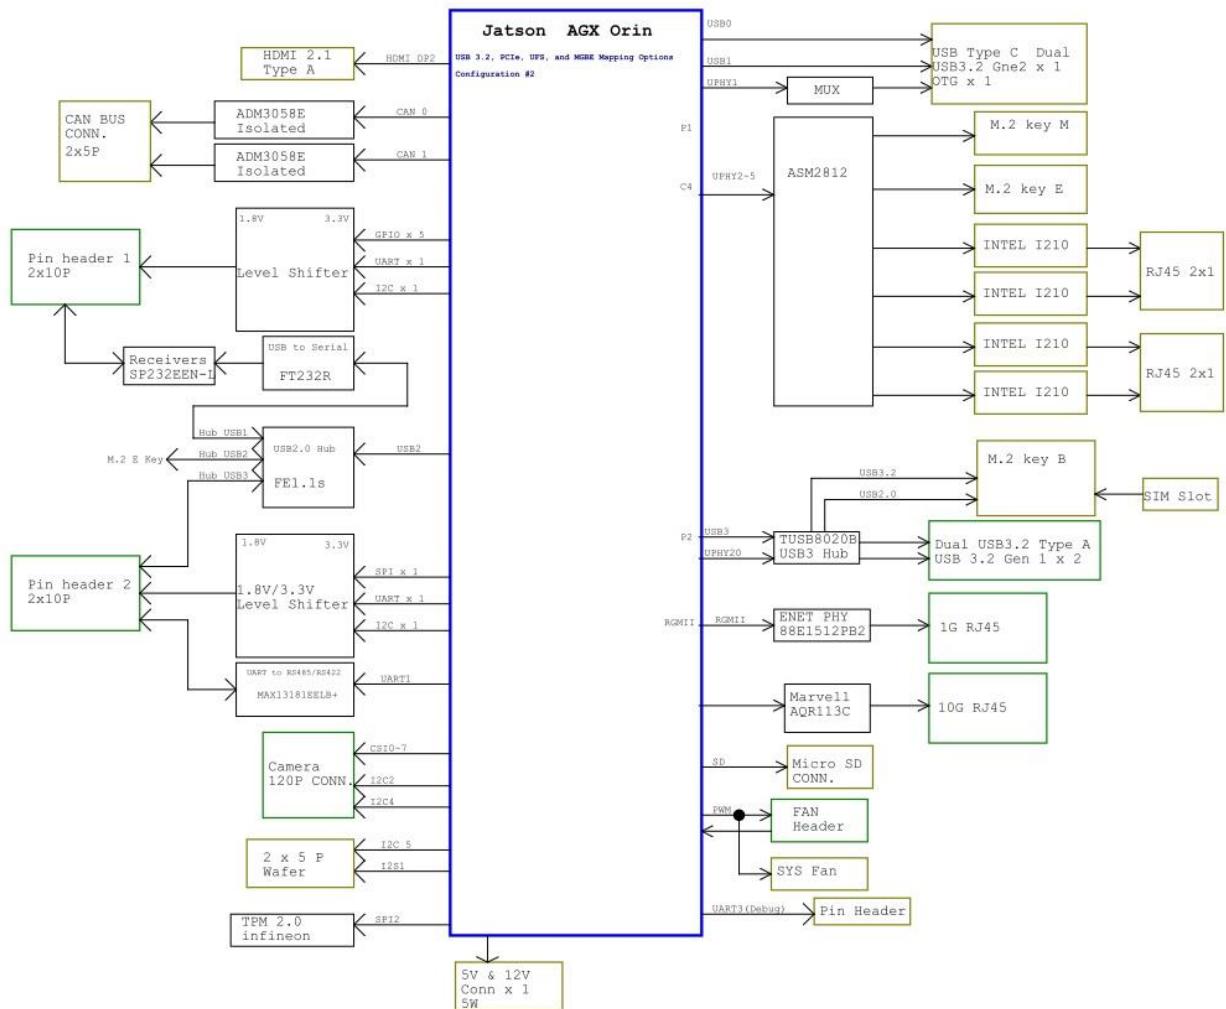

AIB-MX11/AIB-MX12/AIB-MX21/AIB-MX22 Block diagram

2.2 Connectors, LEDs, and Switches Locations

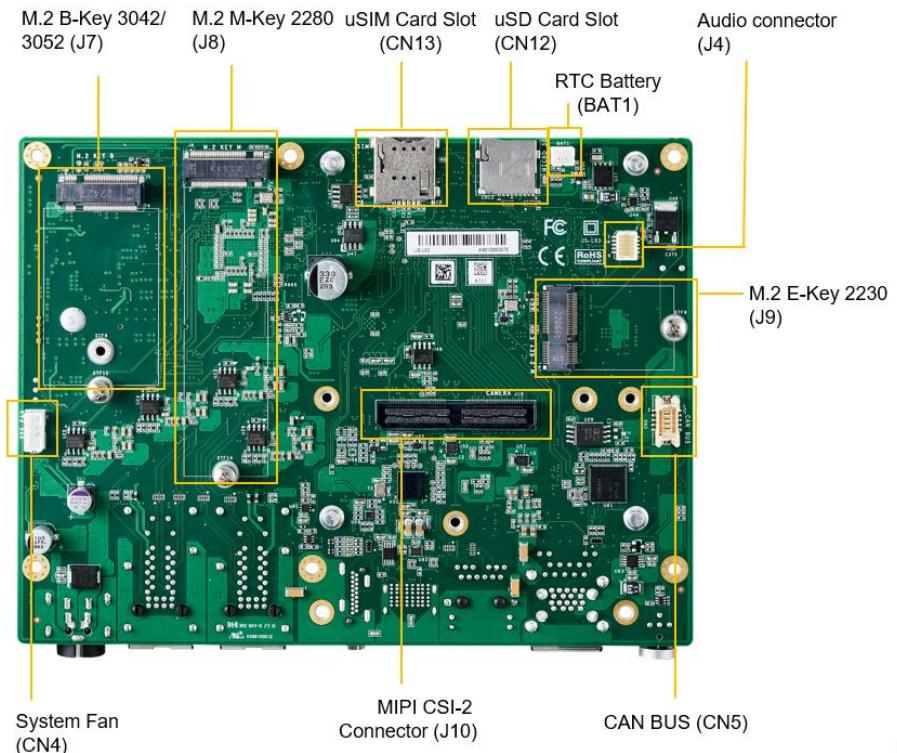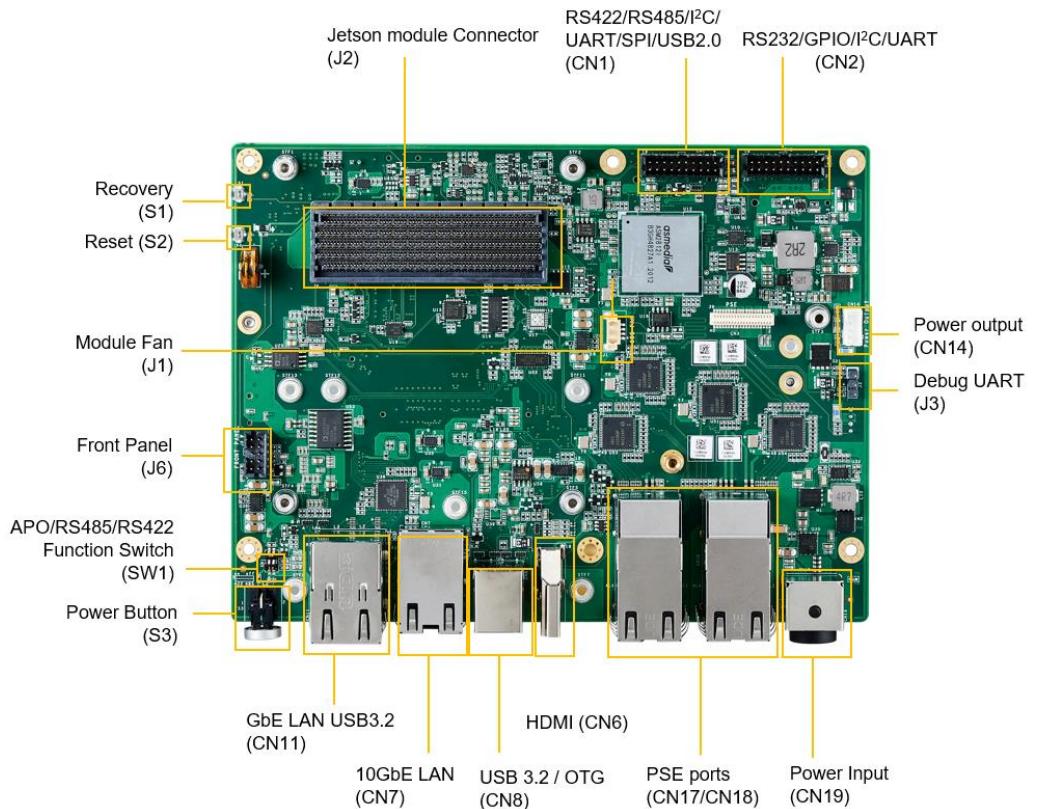

2.3 Connectors and Switches Description


Label	Description
J2	Jetson AGX Orin module connector
CN6	HDMI 2.0 Type-A connector
J8	M.2 M-Key 2280 connector
J9	M.2 E-Key 2230 connector
J7	M.2 B-Key 3042/3052 connector
CN11	2 x USB 3.2 Gen1 Type-A
J10	120-Pin board to board connector for MIPI CSI-2
CN8	USB 3.2 Gen2 Type-C / OTG Type-C
CN11	RJ45 connector, support GbE Ethernet
CN7	RJ45 connector, support 10GbE Ethernet
CN17	RJ45 connector, support GbE PSE
CN18	RJ45 connector, support GbE PSE
CN2	2 x 10P P:2.0 support RS232/GPIO/I ² C/UART
CN1	2 x 10P P:2.0 support RS422/RS485/I ² C/UART/SPI/USB 2.0
CN5	2 x 5P P:1.25 support CAN BUS function
J1	1 x 4P P:1.25 Module Fan
CN14	1 x 4P P:1.25 DC output 5V/12V
J6	2 x 5P P:1.25 Front Panel
CN19	DC Power input connector
J3	Debug UART
S1	Recovery Button
S2	Reset Button
J4	2 x 5P P:1.0 Audio connector (optional with daughter board)
SW1 (Position 1)	To enable APO function by switch
SW1 (Position 2)	To select RS-422 or RS-485 function by switch

BAT1	1 x 2P P:2.0 RTC Connector (optional with battery)
CN4	1 x 4P P:2.0 System Fan
CN12	Micro SD card holder
CN13	Micro SIM card holder

2.4 Connectors and Pinout


Here are the connectors and Pinout information of AIB-MX11/12/21/22 carrier board below.

■ Jetson AGX Orin Module Connector

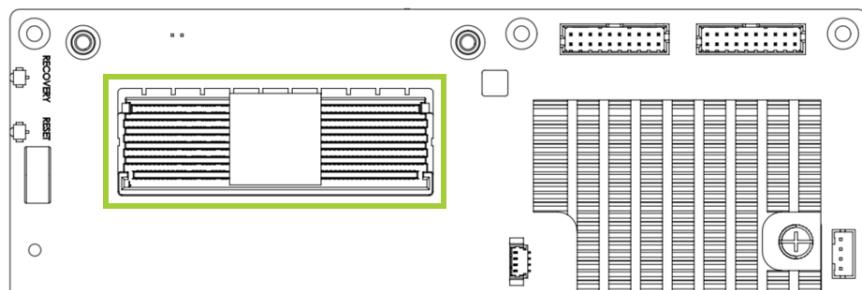


Item	Description
Location	J2
Type	AGX Orin connector
Pinout	Please refer to NVIDIA Jetson AGX Orin System-on-Module datasheet

■ HDMI Type-A Connector

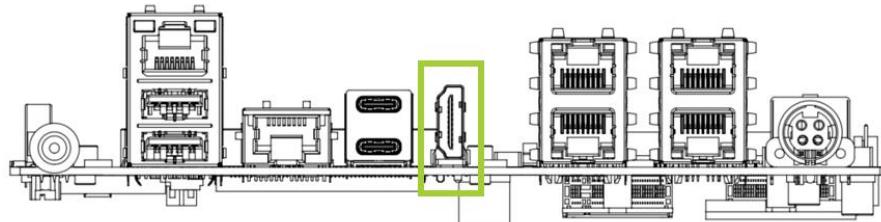


Item	Description
Location	CN6
Type	HDMI Type-A female connector
Pinout	Please refer to HDMI Type-A Standard

■ M.2 B-Key Connector

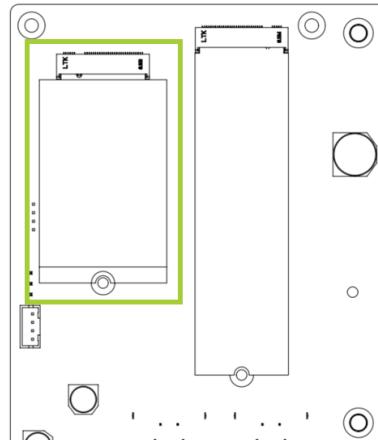


Item	Description
Location	J7
Type	M.2 B-Key 3042/3052
Pinout	Please refer to M.2 B-Key Standard
Notes	Support USB 3.2 Gen1, USB 2.0

■ M.2 M-Key Connector

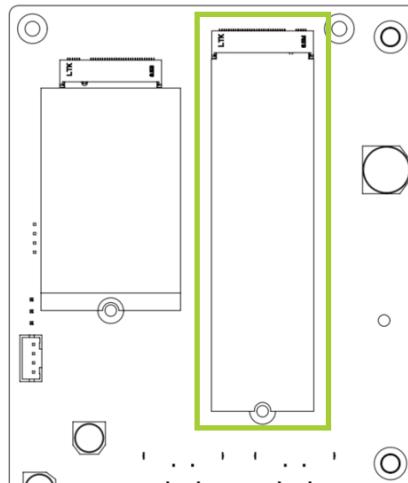


Item	Description
Location	J8
Type	M.2 M-Key 2280
Pinout	Please refer to M.2 M-Key Standard
Notes	Support NVMe, PCIe x2 Gen4

■ M.2 E-Key Connector

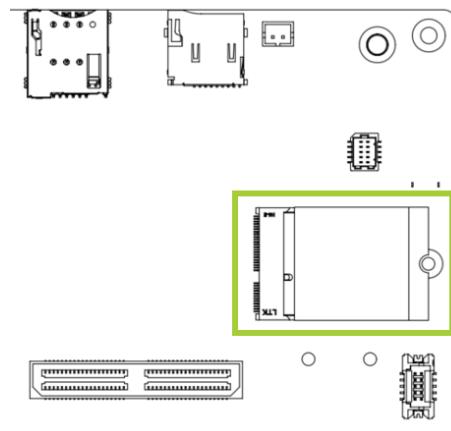

Item	Description
Location	J9
Type	M.2 E-Key 2230
Pinout	Refer to M.2 E-Key Standard
Notes	Support PCIe x1 Gen4, USB 2.0


■ DC Power Input Connector

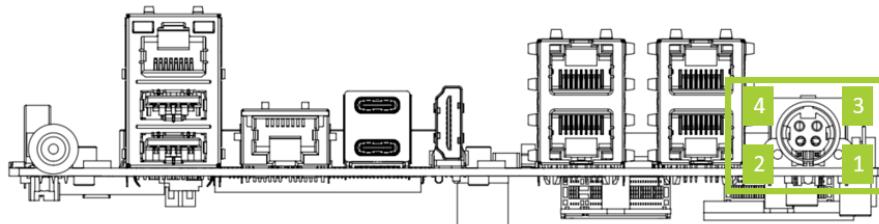

Item	Description
Location	CN19
Type	4-Pin Male DC Power Connector
Pinout	Please refer to DC Jack Standard


Pin #	Definition	Pin #	Definition
1	VIN	2	GND
3	VIN	4	GND

■ Dual USB 3.2 Gen1 Type-A Connector

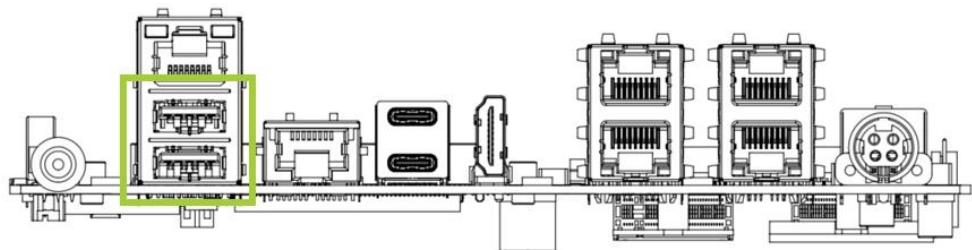

Item	Description
Location	CN11
Type	Type-A USB connector
Pinout	Please refer to USB Standard

■ 120-Pin Board-to-Board Connector for MIPI CSI-2

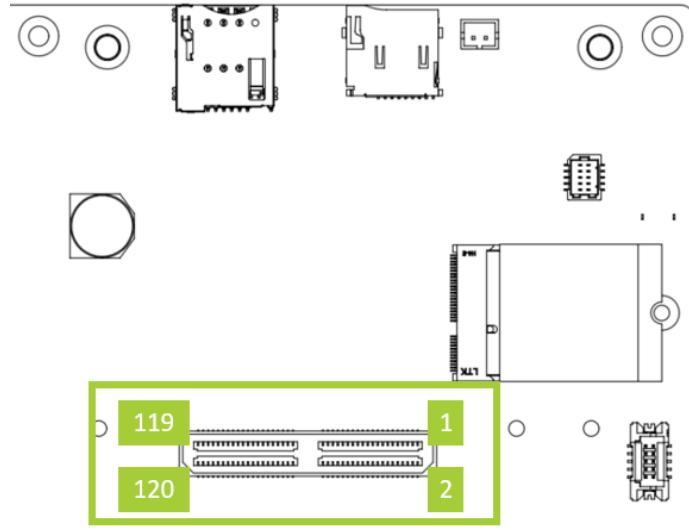


Item	Description
Location	J10
Type	QSH 120-Pin connector

Pin #	Definition	Pin #	Definition
1	CSI_0_D0_P	2	CSI_1_D0_P
3	CSI_0_D0_N	4	CSI_1_D0_N
5	GND	6	GND
7	CSI_0_CLK_P	8	CSI_1_CLK_P

9	CSI_0_CLK_N	10	CSI_1_CLK_N
11	GND	12	GND
13	CSI_0_D1_P	14	CSI_1_D1_P
15	CSI_0_D1_N	16	CSI_1_D1_N
17	GND	18	GND
19	CSI_2_D0_P	20	CSI_3_D0_P
21	CSI_2_D0_N	22	CSI_3_D0_N
23	GND	24	GND
25	CSI_2_CLK_P	26	CSI_3_CLK_P
27	CSI_2_CLK_N	28	CSI_3_CLK_N
29	GND	30	GND
31	CSI_2_D1_P	32	CSI_3_D1_P
33	CSI_2_D1_N	34	CSI_3_D1_N
35	GND	36	GND
37	CSI_4_D0_P	38	CSI_6_D0_P
39	CSI_4_D0_N	40	CSI_6_D0_N
41	GND	42	GND
43	CSI_4_CLK_P	44	CSI_6_CLK_P
45	CSI_4_CLK_N	46	CSI_6_CLK_N
47	GND	48	GND
49	CSI_4_D1_P	50	CSI_6_D1_P
51	CSI_4_D1_N	52	CSI_6_D1_N
53	GND	54	GND
55	NC	56	NC
57	NC	58	NC
59	CSI_5_D0_P	60	CSI_7_D0_P
61	CSI_5_D0_N	62	CSI_7_D0_N
63	GND	64	GND


65	CSI_5_CLK_P	66	CSI_7_CLK_P
67	CSI_5_CLK_N	68	CSI_7_CLK_N
69	GND	70	GND
71	CSI_5_D1_P	72	CSI_7_D1_P
73	CSI_5_D1_N	74	CSI_7_D1_N
75	I2C_GP3_CLK	76	NC
77	I2C_GP3_DAT	78	NC
79	GND	80	GND
81	AVDD_CAM_2V8	82	AVDD_CAM_2V8
83	AVDD_CAM_2V8	84	NC
85	NC	86	NC
87	I2C_GP2_CLK	88	CAM1_MCLK03
89	I2C_GP2_DAT	90	GPIO15_CAM1_PWDN
91	CAM0_MCLK02	92	GPIO16_CAM1_RST
93	CAM0_PWDN	94	CAM2_MCLK04
95	CAM0_RST	96	NC
97	NC	98	NC
99	GND	100	GND
101	NC	102	VDD_1V8
103	NC	104	NC
105	I2C_GP4_CLK	106	NC
107	I2C_GP4_DAT	108	VDD_3V3
109	NC	110	VDD_3V3
111	NC	112	NC
113	NC	114	NC
115	GND	116	GND
117	NC	118	VDD_3V3
119	GPIO25_VDD_SYS_EN	120	VDD_3V3

■ OTG Type-C / USB 3.2 Gen2 Type-C

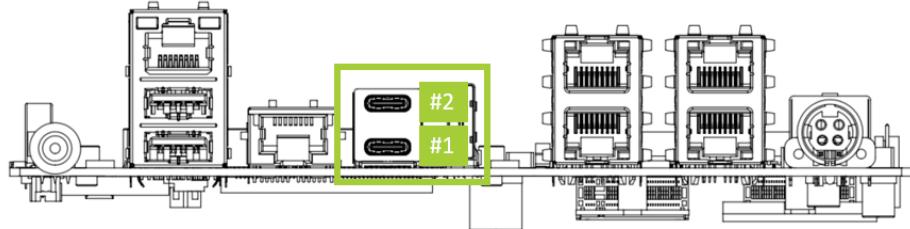


Item	Description
Location	CN8
Type	Dual USB TYPE-C connector
Pinout	Please refer to USB standard
Notes	#1 OTG Type-C Port #2 USB 3.2 Gen2 Type-C

■ Gigabit Ethernet Connector

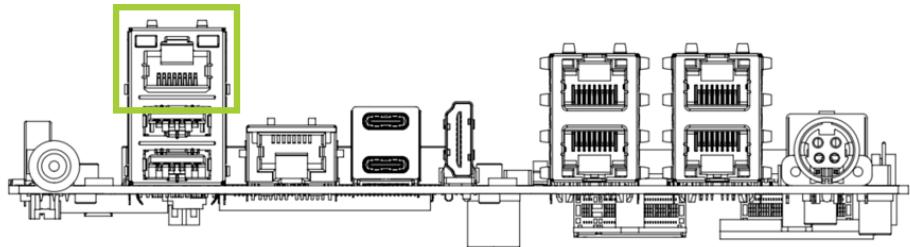


Item	Description
Location	CN11
Type	RJ-45 connector
Pinout	Please refer to Ethernet standard
Port Indicators	LED Static ON: LAN Link is active. LED Blinking: Data is being transmitted. LED Static OFF: LAN Link is inactive.

■ 10 Gigabit Ethernet Connector

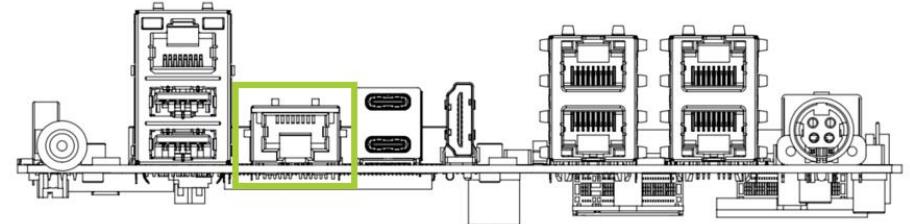


Item	Description
Location	CN7
Type	RJ-45 connector
Pinout	Please refer to Ethernet standard
Port Indicators	LED Static ON: LAN Link is active. LED Blinking: Data is being transmitted. LED Static OFF: LAN Link is inactive.

■ PSE Port1/Port2 Gigabit Ethernet Connector

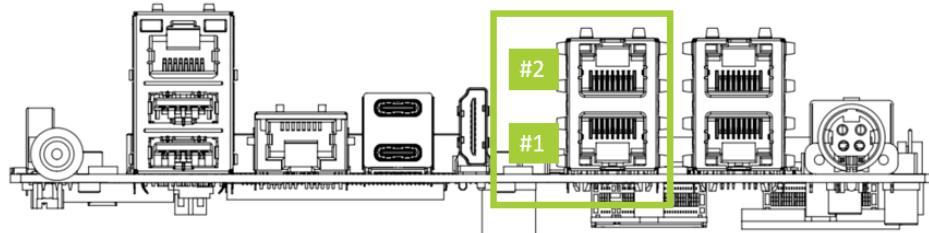

Item	Description
Location	CN17
Type	RJ-45 connector
Pinout	Please refer to Ethernet standard
Indicators	LED Static ON: LAN Link is active. LED Blinking: Data is being transmitted. LED Static OFF: LAN Link is inactive.
Notes	IEEE 802.3af compliant, Power Output 15W per Port #1 PSE port 1 #2 PSE port 2


■ PSE Port3/Port4 Gigabit Ethernet Connector

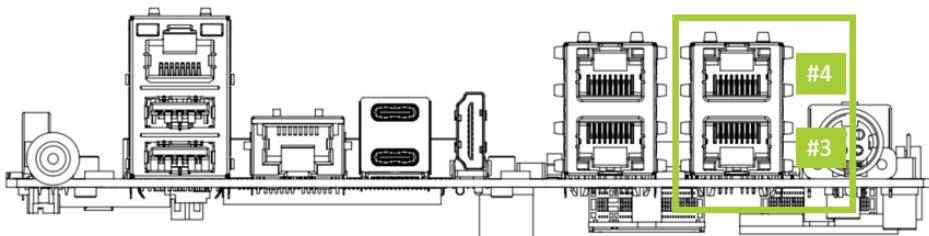

Item	Description
Location	CN18

Type	RJ-45 connector
Pinout	Please refer to Ethernet standard
Indicators	LED Static ON: LAN Link is active. LED Blinking: Data is being transmitted. LED Static OFF: LAN Link is inactive.
Notes	IEEE 802.3af compliant, Power Output 15W per Port #3 PSE port 3 #4 PSE port 3


■ CAN BUS Connector

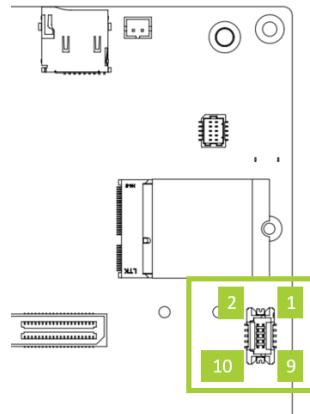

Item	Description
Location	CN5
Type	2*5P 1P:1.25mm H:4.8mm Wafer connector

Pin #	Definition	Pin #	Definition
1	CAN0H	2	CAN1H
3	CAN0L	4	CAN1L
5	NC	6	NC
7	CAN_5V	8	CAN_5V
9	GND	10	GND


■ MISC I/O Connector (RS232/GPIO/I²C/UART)

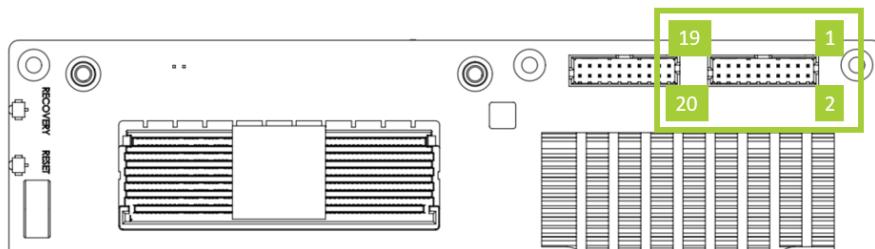

Item	Description
Location	CN2
Type	2*10P P:2.0mm H:7mm Pin header

Pin #	Definition	Notes	Pin #	Definition
1	VDD_3V3		2	VDD_5V
3	GPIO_1 (GPIO17 / PP.04 444)	IN/OUT	4	UART_TXD
5	GPIO_2 (GPIO11 / PAC.05 491)	IN/OUT	6	UART_RXD
7	GPIO_3 (GPIO28 / PR.00 456)	IN/OUT	8	UART_CTS
9	GPIO_4 (GPIO27 / PN.01 433)	IN/OUT	10	UART_RTS
11	GPIO_5 (GPIO35 / PH.00 391)	IN/OUT	12	RS232_RX
13	I2C_CLK		14	RS232_RTS
15	I2C_DAT		16	RS232_TX
17	GND		18	RS232_CTS
19	GND		20	GND


MISC I/O Connector (RS422/RS485/I²C/UART/SPI/USB2.0)

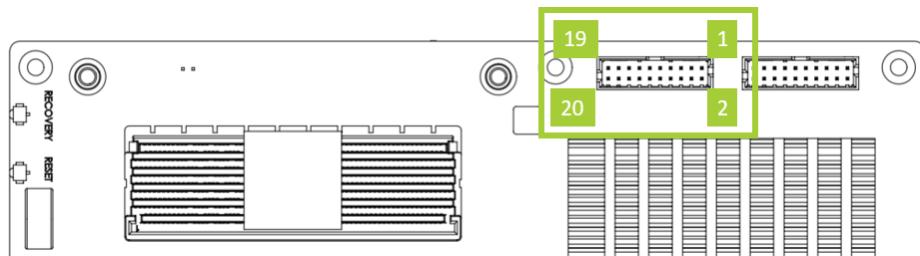

Item	Description
Location	CN1
Type	2*10P P:2.0mm H:7mm Pin header

Pin #	Definition	Pin #	Definition
1	VDD_3V3	2	VDD_5V
3	I2C_CLK	4	USB_D-
5	I2C_DAT	6	USB_D+
7	UART_TX	8	SPI_MOSI
9	UART_RX	10	SPI_SCK
11	RS422_A (RX+)	12	SPI_MISO
13	RS422_B (RX-)	14	SPI_CS1
15	RS422_Z (TX-) / RS485-	16	SPI_CS0
17	RS422_Y (TX+) / RS485+	18	NC
19	GND	20	GND


■ Front Panel Connector

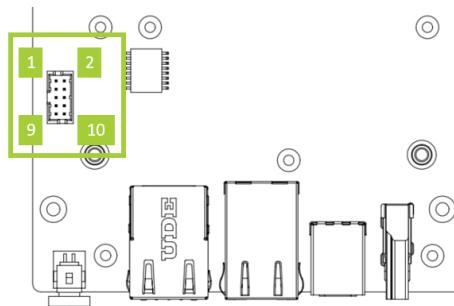

Item	Description
Location	J6
Type	2*5P P:2.0mm H:7mm Wafer connector

Pin #	Definition	Pin #	Definition
1	Power On	2	GND
3	Reset	4	GND
5	Recovery	6	GND
7	Sleep	8	GND
9	LED+	10	LED-

■ System Fan Connector

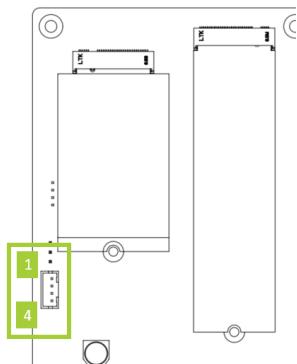


Item	Description
Location	CN4
Type	1*4P P:2.0mm Wafer connector

Pin #	Definition	Pin #	Definition
1	GND	2	VCC_12V


3	NC	4	PWM
---	----	---	-----

■ RTC Battery Connector

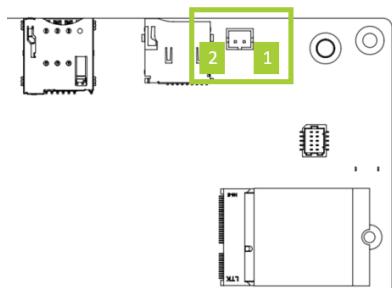


Item	Description
Location	BAT1
Type	1*2P P:2.0mm connector
Pin #	Definition
1	—
2	+

■ Debug UART

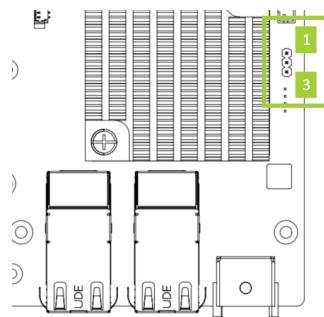

Item	Description
Location	J3
Type	1*3P P:2.54mm Pin connector
Pin #	Definition
1	Debug_UART_TX
2	Debug_UART_RX
3	GND


■ Auto Power ON (APO) Switch

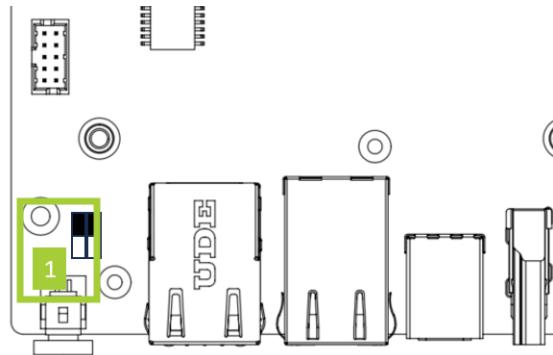

Item	Description
Location	SW1-Position 1
Type	DIP Switch
Notes	To enable APO function by Switch

Position	Function
ON	Disable APO
1 (Default)	Enable APO


■ RS-485 / RS-422 Mode Switch

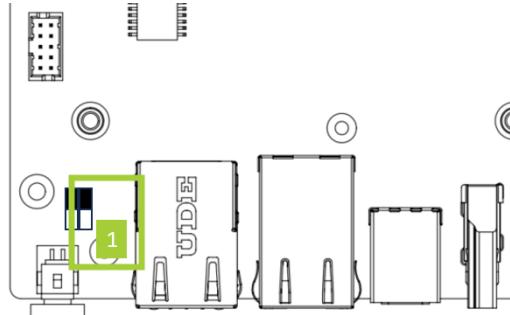

Item	Description
Location	SW1-Position 2
Type	DIP Switch
Notes	To select RS-485 / RS-422 mode by Switch

Position	Function
ON	RS-422
1 (Default)	RS-485


■ Module Fan Connector

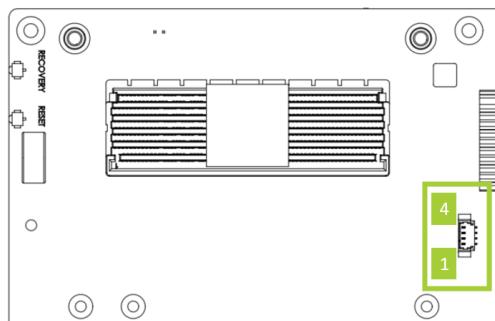

Item	Description
Location	J1
Type	1*4P 1.25mm Wafer connector

Pin #	Definition	Pin #	Definition
1	GND	2	VDD_12V
3	TACH	4	PWM


■ 5/12V Output Connector

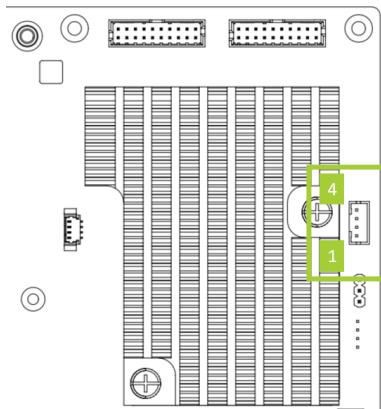

Item	Description
Location	CN14
Type	1*4P 1.25mm Wafer connector
Notes	Output: 0.5A @5V, 0.5A @12V

Pin #	Definition	Pin #	Definition
1	GND	2	GND
3	5V	4	12V

■ Audio Board-to-Board Connector

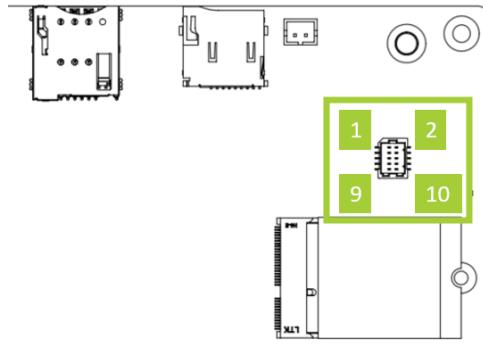


Item	Description
Location	J4
Type	2*5P P:1.0mm Wafer connector

Pin #	Definition	Pin #	Definition
1	I2S_SCLK	2	VDD_3V3
3	I2S_OUT	4	I2C_DAT
5	I2S_IN	6	I2C_CLK
7	I2S_FS	8	GND
9	I2S_MCLK	10	GND


Note: The voltage level of I2C & I2S is 1.8V

■ Reset Button

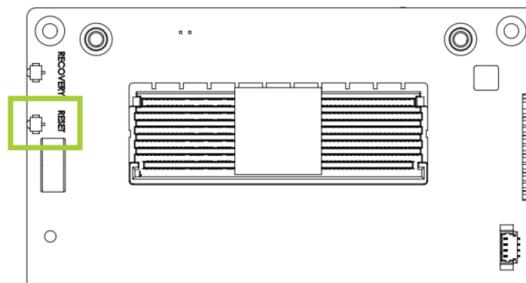


Item	Description
Location	S2
Type	Tact switch
Notes	To trigger system reset action

■ Recovery Button

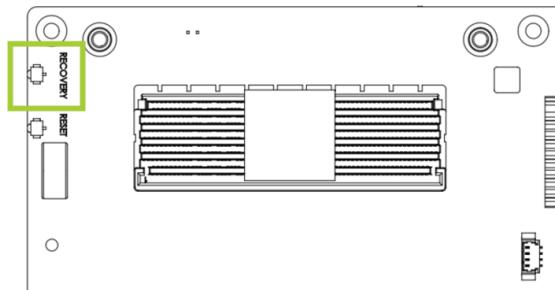


Item	Description
Location	S1
Type	Tact switch
Notes	To trigger system recovery action

■ Micro SD Card Slot

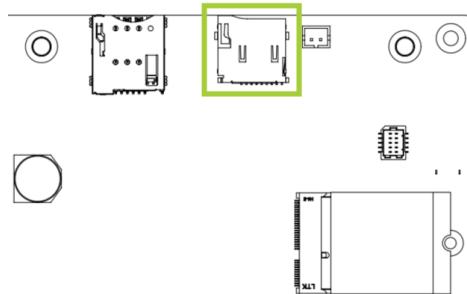

Item	Description
Location	CN12
Type	Push-Push Micro SD card holder

■ Micro SIM Card Socket

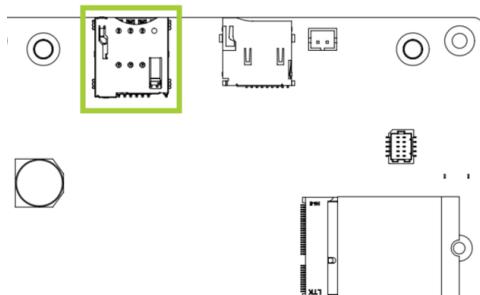

Item	Description
Location	CN13
Type	Push-Push SIM card

2.5 Power Consumption

The power consumption shown as below is the theoretical value with AGX Orin module installed on AIB-MX11

Type	Theoretical Maximum System power
Idle	10.5 W (Connect with Keyboard, Mouse and HDMI Display)
Full Loading	81 W (Connect with Keyboard, Mouse, HDMI Display, LAN and 2 PSE ports with CPU And GPU 100% Loading)

AIB-MX12

Type	Theoretical Maximum System power
Idle	10.5 W (Connect with Keyboard, Mouse and HDMI Display)
Full Loading	111 W (Connect with Keyboard, Mouse, HDMI Display, LAN and 4 PSE ports with CPU And GPU 100% Loading)

AIB-MX21

Type	Theoretical Maximum System power
Idle	12 W (Connect with Keyboard, Mouse and HDMI Display)
Full Loading	102 W (Connect with Keyboard, Mouse, HDMI Display, LAN and 2 PSE ports with CPU And GPU 100% Loading)

AIB-MX22


Type	Theoretical Maximum System power
Idle	12 W (Connect with Keyboard, Mouse and HDMI Display)
Full Loading	132 W (Connect with Keyboard, Mouse, HDMI Display, LAN and 4 PSE ports with CPU And GPU 100% Loading)

Please refer to the following power consumption of individual I/O interface according to your use case.

Type	Theoretical Maximum System power
USB 3.2 Gen1 Type A (per Port)	4.5 W
USB Type C	4.5 W
HDMI	0.25 W
M.2 E KEY	2 W
M.2 M KEY	7 W
M.2 B KEY	3 W
CAN Bus	1 W
SD Card	0.72 W
RJ45(1G)	0.83 W
RJ45(10G)	3.43 W
PoE (per Port)	15 W (IEEE 802.3af compliant)
Fan (Module)	2 W

2.6 Mechanical Dimensions

Integration assembly drawing for AIB-MX11/12/21/22 carrier board, AGX Orin module and Fansink.

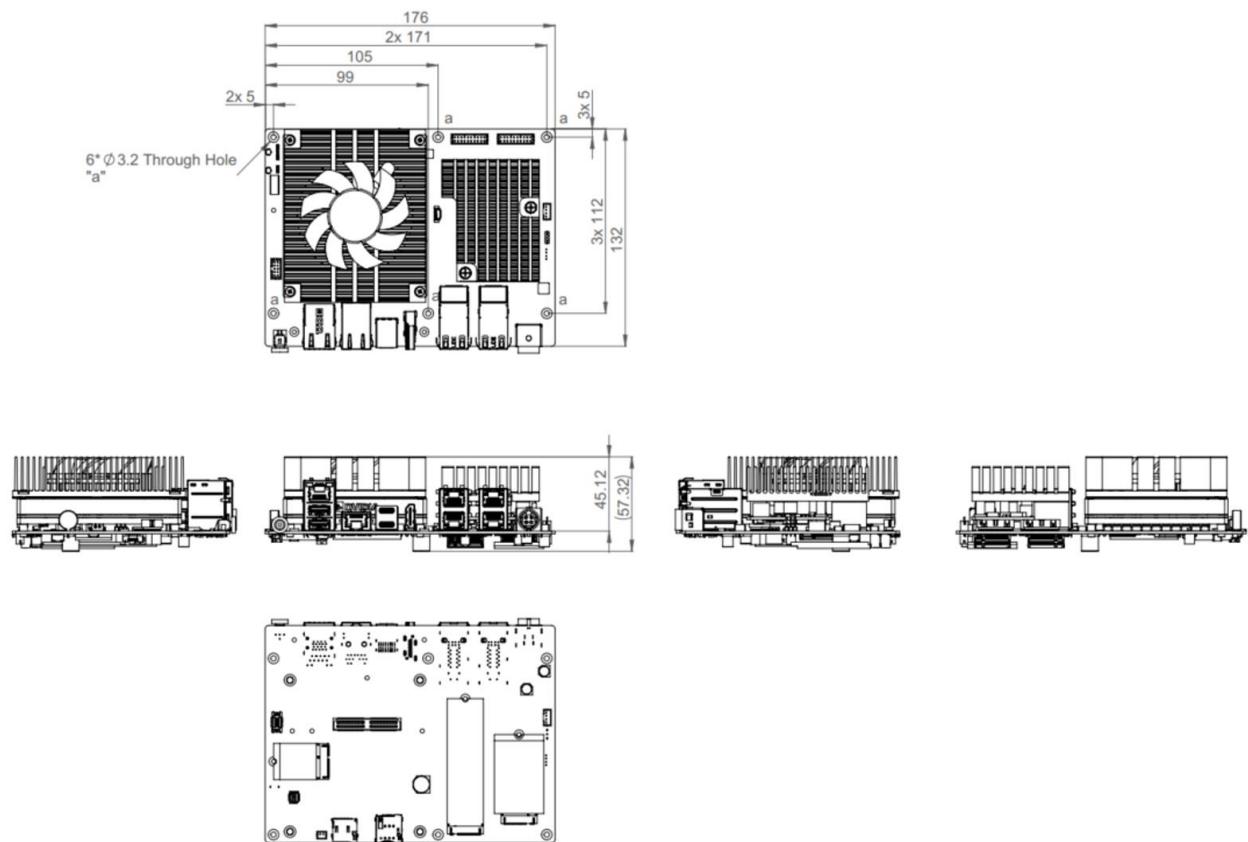

3. Software/BSP Installation

Aetina NVIDIA Jetson products have built-in BSP so the users don't have to install it after getting the products. Since we develop our own BSP, the users may need to follow the BSP installation SOP to re-install/upgrade/downgrade the BSP. Please visit the Aetina website or contact with Aetina FAE at Tech_support@aetina.com for installation guides, BSPs and technical tips.

4. Recovery Mode

The OTG Type-C port of AIB-MX11/12/21/22 can be connected to another host device (Linux PC running NVIDIA Jetpack™) to run recovery process for re-flashing BSP.

Note: Please backup user personal files before flashing process

Connect the OTG Type-C port to another host device which supplying updated BSP file.

Press and hold the Reset button, then press and hold the Recovery button continually.

After one second (1 sec.) release the Reset button first, then release the Recovery button.

The AGX Orin will show up as a new NVIDIA device on USB list (Terminal console) at the host device.

Running re-flashing BSP process can be executed by the host device now.

5. Initial Setup

Before using AIB-MX11/12/21/22 series, please follow the steps below to have initial setup.

5.1 Prepare the materials

Please prepare the materials list below.

- A monitor with HDMI and respective cables
- USB keyboard and mouse
- Ethernet cable

5.2 Hardware connection

ATTENTION: Jetson Orin module is not hot-pluggable. Before installing or removing the module, the main power supply (to Power connector, CN19) must be disconnected and adequate time allowed for the various power rails to fully discharge.

For the initial setup, users will need to connect LAN port, keyboard and mouse via USB interface, HDMI interface, and power connector.

5.3 Setup details

Step 1: Connect to the monitor while powering off

Step 2: Power on and automatically enter the OS

Step 3: Log in to the Ubuntu OS via credentials below

- Username: nvidia
- Password: nvidia

For more information on how to use Ubuntu and NVIDIA Jetson modules, please visit Ubuntu and NVIDIA website.

Aetina Corporation | Headquarters

17F-1, No.237, Sec.1, Datong Rd., Xizhi Dist., New Taipei City 221, TAIWAN

Phone: +886-2-7709 2568

Fax : +886-2-7746 1102

Mail : sales@Aetina.com

www.Aetina.com